


E15 USER MANUAL


E15 Smart Lock

Thanks for choosing our E15 smart lock. Please check the user manual carefully before operation and installation.


Front panel

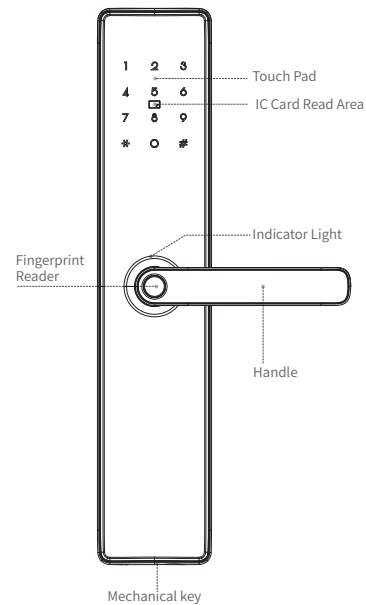


Back panel

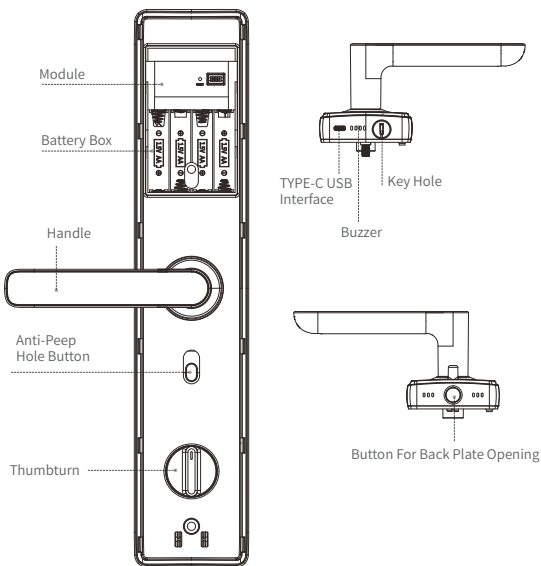

J6068 Mortise Lock

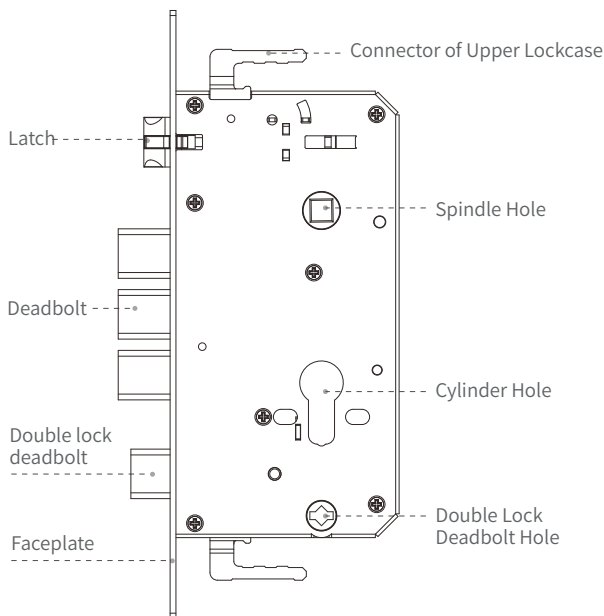


Mechanical key

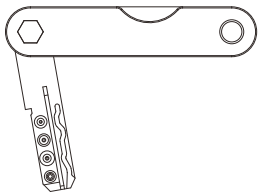

Packing List


ITEM	Front Panel	Back Panel	Mortise Lock Note:Include striking plate and striking box(Striking box is not required of metal door)	Accessories	User Manual	Template	Mechanical Key
QUANTITY	1	1	1	1	1	1	2

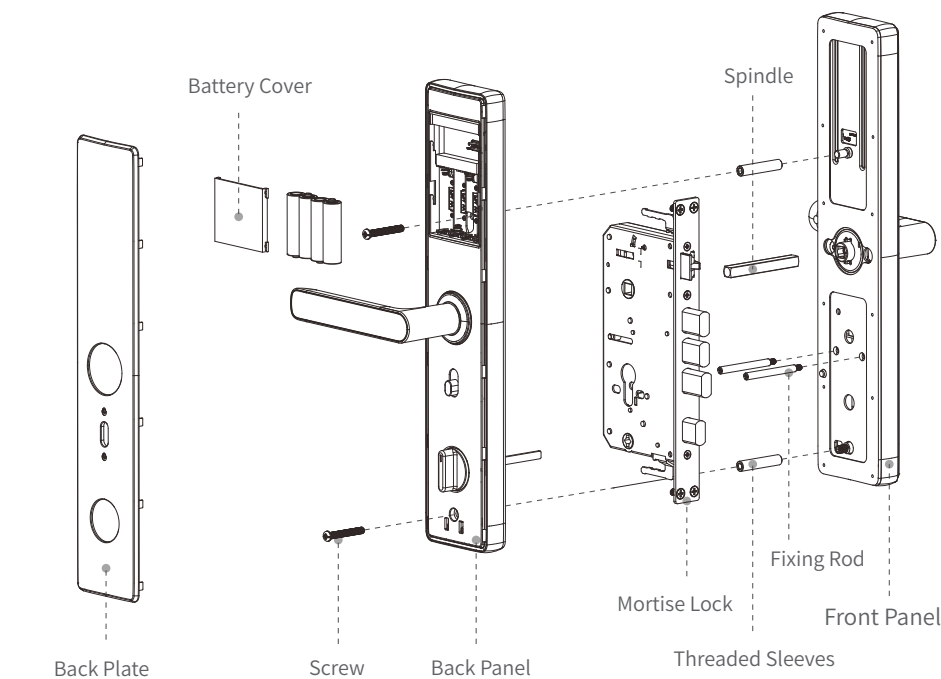

Installation steps


1

 Drawing lines on the door as the template marked, the suggested distance between handle and the floor is 1m--1.2 m.




2

 Drilling holes as Template required.




3

Insert the suitable mortise into the door and use 4 pcs of M5*10 crosshead screws to fix the mortise.(ST4.2*25 self-tapping counter sunk screws for Wooden Door)

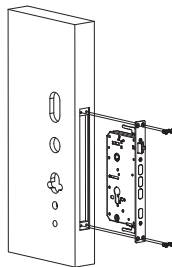


4

Insert suitable threaded sleeves, fixing rods to the corresponding position of the front panel.

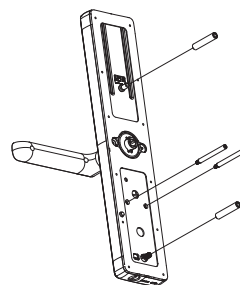


5

 Install suitable spindle on the spindle hole of front panel. Then thread the wire of front panel through door hole. At last, fix the front panel on the door.




6

Insert the front panel wire and mortise wire to the corresponding sockets of circuit board on back panel. Then insert the back spindle into the spindle hole of back panel and put transmission rod into mortise lock. At last, install the back panel on the door.

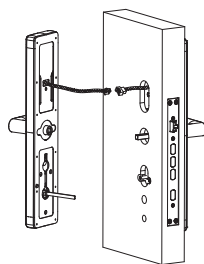

7


Use screws (different kinds of locks have different numbers and types of screws) to fasten back panel with back plate. At last put into 4 * 1.5V alkaline batteries and cover them.

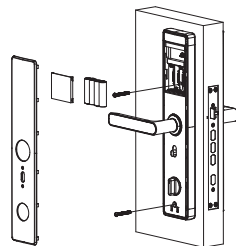

Change direction of front handle


1

Remove screw by screwdriver(As shown).

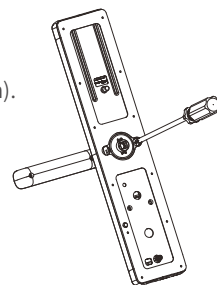


2

Rotation upward the front handle 180°to reverse direction (As shown).

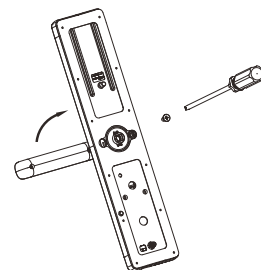


3

Tighten the screw. Please check whether the handle is used properly.

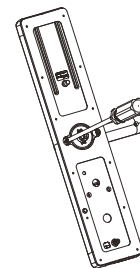


1

Remove screw by screwdriver(As shown).

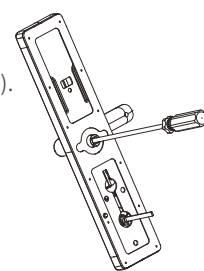


2

Rotation upward the front handle 180° to reverse direction (As shown).

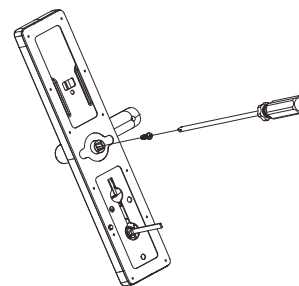

3


Tighten the screw. Please check whether the handle is used properly.

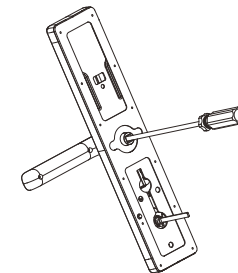

Steps for displacing the batteries


1

Press the bottom button to pick up the back plate. (As shown)

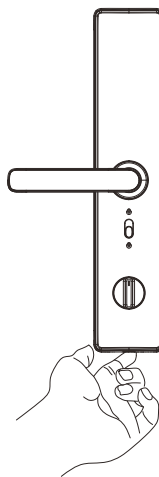


2

Remove battery cover

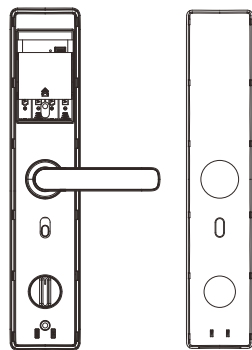

3


Change new batteries and install the back plate.

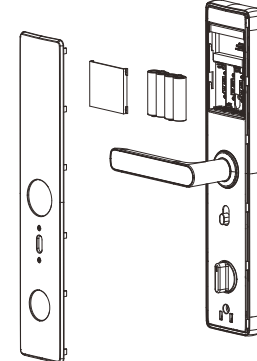

Keyboard operation instructions


NOTE: #= / *=

The two functions are equal on different panels

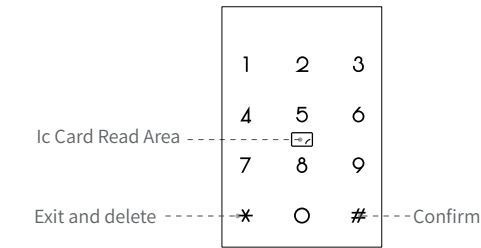


Emergency power supply and reboot system

If in low power or system halt, please use wire with Type-C interface to connect to portable power bank and insert in emergency power supply interface. Then you can open properly.

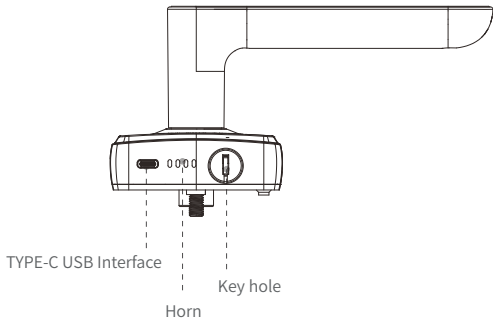

Restore default settings

This procedure will delete all user codes associated with the lock. Remove the battery cover and use needle to press the reset button for 3 seconds when the power is on. The indicator light is green when the system data is cleared.

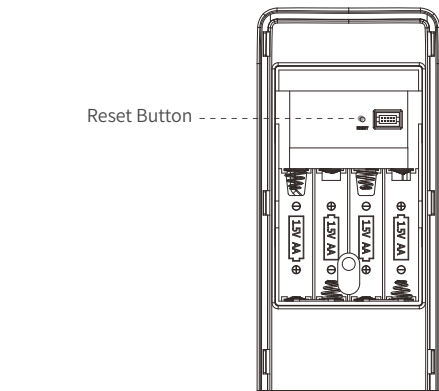

Indicator Meaning

LOCK STATUS INDICATOR

- The light flashes green when verification succeeded.
- The light flashes red when verification failed.
- The light is yellow when lock enters setting mode.

LOW BATTERY STATUS INDICATOR

- Light will be flashes red when battery is low and accompanied by voice prompts (non-mute mode)

SYSTEM LOCKED STATUS INDICATOR

- Enter password wrong 5 times in 5 minutes, the lock will go into sleep mode and indicator turns red.

MUTE MODE INDICATOR

- The indicator of turn on/turn off mute mode is green and accompanied by voice prompts (double click * key can turn on/turn off mute mode).

RESTORE FACTORY SETTINGS INDICATOR

- The indicator light is green when the system data is cleared.

 
Operating process

Demo mode




Setting mode

Note: Default administrator ID is 01 when first registration; Please remember the administrator password, only can press the reset button in the back panel to clear the system data and reset password




Registered user


Note: Press [#] can skip password/IC card registration step. Password/IC card can be re-registered by deleting ID.

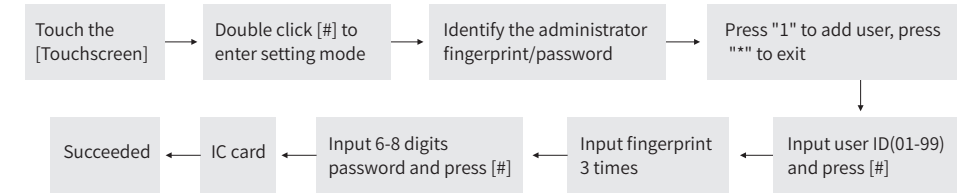

Delete registered user

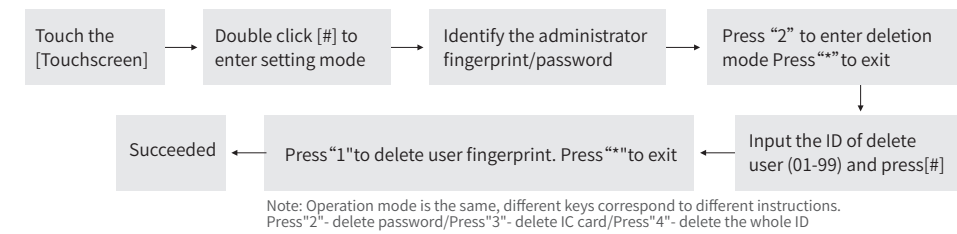


Date and time settings

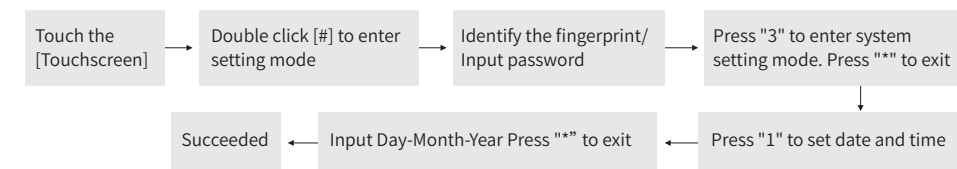


Volume setting


Note: The default is medium volume

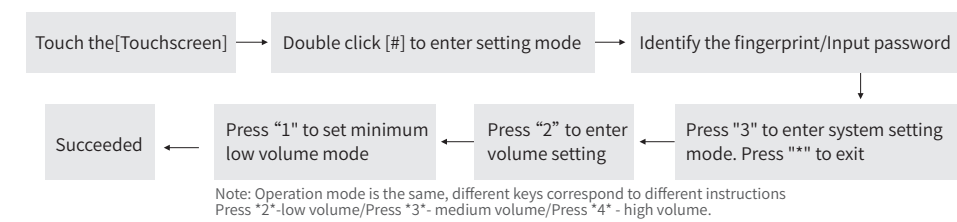

Restore factory default setting

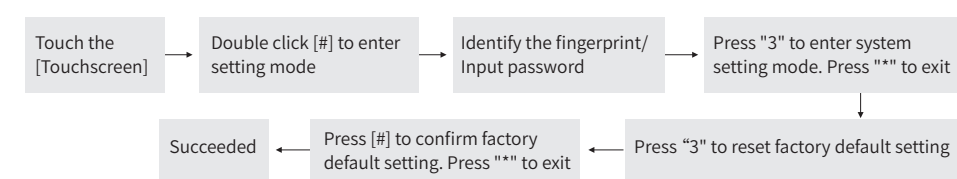


Query lock ID number

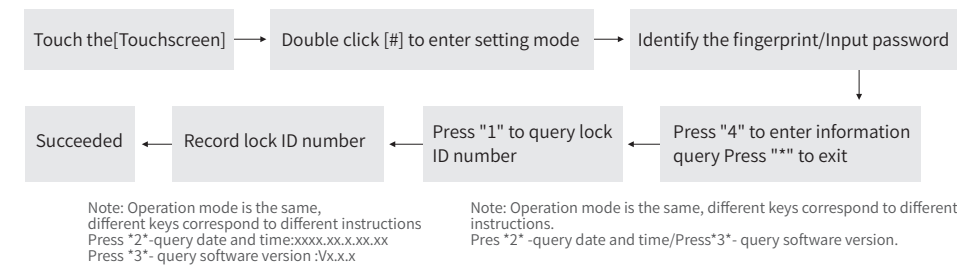

Tuya Bluetooth setting

Prompts: a. The indicator light is blue when Bluetooth pairing.
b. The indicator light is green when pairing succeeded.
c. The indicator light is red when pairing failed.

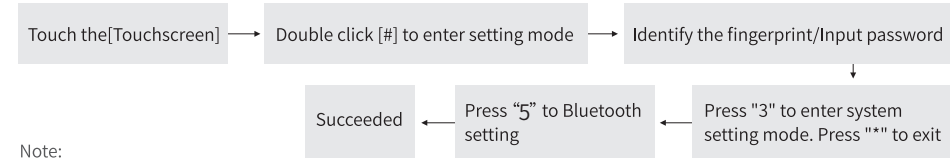

Note:
Please download "Tuya" App from the App stores before using this function.
1. Turn on "Tuya" App and phone's bluetooth.
2. Click " Add device" .
3. Waiting for adding device.

Featured Operations

User ID grading management

- Administrator(01) can open the door and manage lock data information. In special cases, the administrator user has the highest authority. We recommend only the households and leadership to use this level function.
- Common user(02-99) only can open the door. We recommend the children or company staff to use this level function.
- Remote user(101-108) only can open the door. (The function is optional)

Key function

- "*" -Esc key and return key; "#"-enter key.
- Double click "#" key to setting mode.
- Double click "*" key to mute mode, and once double click "*" can exit mute mode. In mute mode, double-click the "# " key to enter the setting mode and with voice guidance, Automatically switch to mute mode after exiting setting mode.

Locked inside function

Rotate thumbturn inside the door to lock it. No one outside the door has the authority to open the door, and the mechanical key can not open it.

System reset function

Please keep pressing the reset button on the back panel with a pin for at least 3 seconds to restore factory default.

Anti peep password

Add any numbers before or behind the real password to prevent other person to peep the real password. (18 digits)

Emergency power supply

When the batteries run out, please use 5V power bank as emergency power supply for temporary opening

Low power alarm

When the voltage of installed batteries is lower than 4.3V, there will be a sound alarm after each opening, please replace the battery in time.

Anti-prizing alarm

- If someone tries to break in, the lock will sound an alarm.
- The methods of turn off the alarm:
(1) press "*" and input password (2) press "# " and input fingerprint

Password protection function

Enter the wrong password five times in 5 minutes, and the system will go into sleep mode for 90 seconds.

System reboot function

If in low power or system halt, please use wire with Type-C interface to connect to portable power bank and insert in emergency power supply interface.

Attention

1.Operating the lock requires special environment. Please use it in specified field technology ranges. The long time overload and exceed usage will reduce the life length. Please keep your finger clear and prevent this product from long time in sunshine when use it.

2. After a period of time, there will has dirt on the fingerprint reader and may affect normal use. Please use soft cotton to clear the fingerprint reader. The fingerprint head and screen are the fragile glass materials, please do not hit or touch by hard object.

3. If the lock voltage is insufficient when open door, the door will prompt with alarm sound and screen showed low voltage, please change the battery. Please do not use with mixed old and new battery. If you do not change the battery on time, the system will out of power and stop running. At this time, you can buy a 9V battery from market for emergency power supply. After open door, please change to AA battery in time.

4. The lock handle is the necessary auxiliary tool to open door. Please do not hang any heavy object on the handle.

5.Please choose professional worker to install the door lock and follow with our installation standard. Please do not disassemble this lock personally and take care of relevant label to avoid unnecessary trouble for warranty.

6.Please register administrator fingerprint and keep the mechanical keys after lock is installed well. When the fingerprint and password and other methods can' t open door, you can open door by mechanical key.